 


NOTICE OF FUNCTION CHANGE DP1 firmware version 1.01

 
The following new functions were added to the DP1 camera with the new Firmware update (Firmware version 1.01).


Additional Function

- The **Grid Display mode** for still picture taking is added to the LCD monitor.

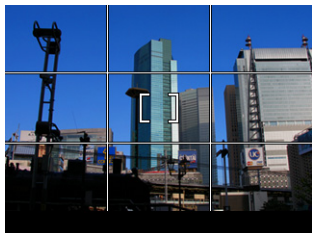

Grid Display mode

Please refer to page **32** of the instruction manual. By pressing the  button, it is possible to display the grid.

During picture shooting mode, each time the  button is pressed, the color LCD monitor display will change as follows.

Display Icons → **Grid Display** → Hide Icons → LCD Monitor OFF → •••

Notice :

- The grid display cannot be used in MF mode and movie mode.
- Like in Hide Icons mode, no information is displayed other than the AF Frame when the camera is in Grid Display mode.