



DP1 firmware version 1.03


The following new functions were added to the DP1 camera with the new Firmware update (Firmware version 1.03).

ADDITIONAL FUNCTION.1**The Grid Display mode for still picture taking is added to the LCD monitor.**

(If firmware Ver. 1.03 is updated from Ver.1.01 or Ver.1.02, the Grid Display will show Display Icons. It will not be possible to hide the icons when the camera is in the Grid Display after upgrading to Ver. 1.03.)

Please refer to page **32** of the instruction manual. By pressing the  button, it is possible to display the grid.

During picture shooting mode, each time the  button is pressed, the color LCD monitor display will change as follows.

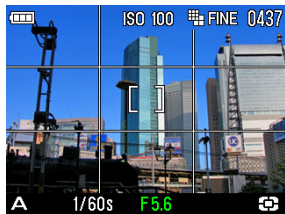

Display Icons → **Grid Display** → Hide Icons → LCD Monitor OFF → •••

Notice :

- The grid display cannot be used in MF mode and movie mode.

ADDITIONAL FUNCTION.2**Addition of ISO 50 sensitivity**

ISO 50 can provide exceptional results with the fine detail and lower noise.

Please see DP1 USER'S MANUAL P.53 for information regarding "SETTING THE SENSITIVITY".

Notice :

- ISO 50 has a narrow dynamic range and therefore may blow out highlight detail such as brightness or high saturation areas. Please ensure pictures are taken with the correct exposure setting. If it will not be possible to capture sufficient results, please adjust the EV setting to the minus side for a little more protection of the highlights.
- If [Auto] is selected, it will not change to ISO 50 automatically. Regardless the firmware version, ISO value is change to ISO 100 or 200 in normal shooting, or to ISO 100, 200 or 400 automatically when using the flash.